

M•LOCKS

E-Pass
EP8050HL
EP8050HU

User manual
V01 EN



M•LOCKS BV

Vlijtstraat 40 • 7005 BN Doetinchem • The Netherlands • www.m-locks.com

CONTENT INSTRUCTIONS FOR USE

- 1 Important instructions
- 2 Symbols and signals
- 3 Opening the lock
- 4 Opening the lock with time delay
- 5 Locking
- 6 Changing code (with the door open!)
- 7 Manager instructions
- 8 Adding codes / users
- 9 Delete code / user
- 10 Setting the time delay and opening window time
- 11 Changing the delay setting
- 12 User audit
- 13 Replacing the battery
- 14 Troubleshooting

The world of M-LOCKS

M-LOCKS has extensive experience in this field and is a well-known, independent distributor and producer of high-security locks and locking systems for fire safes, security safes and doors.

M-LOCKS' products are (nearly) invisible, but present everywhere. For example,

1 IMPORTANT INSTRUCTIONS

- Before using the lock, please read the instructions for use carefully.
- The instructions for use only relate to the lock itself and not to how to operate the safe.
- Ensure that you **only** program the lock when the **safe door is open**.
- After changing the code, always try the code several times with the safe door open.
- **Only after several positive function tests (opening / closing) the safe door may be closed.**
- Each key entry is confirmed by an audible tone and visual signal. These signals are not referred to in the description that follows.
- You have a maximum of 10 seconds for each key entry. If you do not make an entry via the keypad during this period of 10 seconds, the entry procedure will automatically abort. You must then start again from the beginning.
- After entering a valid code, you will hear two audible tones. An invalid entry will trigger a long tone.
- After entering an invalid code the first attempt; wait 20 seconds before entering the code again.
- If the code is entered incorrectly on four consecutive occasions. The keypad and the lock will be disabled for 5 minutes. During this period, the LED will flash every 10 seconds and you will hear a long tone when attempting to make an entry. Entering an incorrect code on two further occasions after the keypad has been re-enabled, will trigger a new keypad lock-out period of 5 minutes. After entering a valid code you have four new occasions to enter the code and open the lock.
- At the time of delivery, the lock is set to the standard Manager Code of 1 2 3 4 5 6. Change this code immediately to your own choice of Manager Code. Do not use personal or other simple data which can easily be found out for your Manager Code.
- The lock only works with 6-digits codes.
- If needed, the owner of the Manager Code can add one (user) code. This code must be immediately changed by the user in a code of his choice. Don't use personal or other simple data for your user code.
- Please keep the code always carefully and protect it against improper use by unauthorized persons.
- Depending on the used lock / keypad and the way the lock is installed, there are several ways to open and to close a safe. By example with a lever or by turning the keypad. Please contact your safe supplier for more information about your specific situation.

! **Caution! Don't forget your code, the lock can not be used anymore!**

! Caution!

- The lock has been designed for use in a temperature range from +10°C to +50°C and a non-condensing humidity range from 30% to 80%.
- It may only be cleaned with a moist cloth (do not use aggressive cleaning agents).
- The lock may only be installed by qualified fitters.
- The lock may not be lubricated.
- Never open the lock housing. If it is necessary to disassemble the hardware, only do so in accordance with the technical instructions. If you fail to do so, the lock may no longer function properly and you will forfeit your right to warranty.

2 SYMBOLS AND SIGNALS

double audible tone, **correct**
entry



LED **flashes**



digit on keypad



long audible tone, **incorrect**
entry



LED **illuminated**



press and hold

3 OPENING THE LOCK

Enter the code (Manager Code set at the factory = 1-2-3-4-5-6), if the code is correct, you will hear a double tone, turn the knob and open. If the door is not opened within 3 seconds, the lock will automatically engage again.


4 OPEN WITH TIME DELAY

For example!



Enter the code (i.e. 1-1-1-1-1-1), after entering a right code, you will hear a double tone and time delay starts. During time delay expires, the light flashes every 10 seconds. After time delay has elapsed, a double signal sounds and the open window starts.

For example!

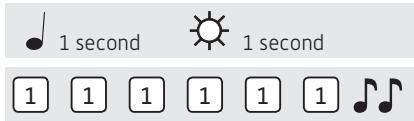

During the open window, the light flashes and the locks beeps, every second. To open the lock, a valid code has to be entered again during the open window. After entering a right code, you will hear a double tone. You can turn the knob and unlock the door. If the lock is not opened within 3 seconds, the lock will automatically lock again.

If the open window expires without entering a valid code, the lock is secured again with time delay.

Press a random key to break off time delay.

5 LOCKING

Close the door and turn the knob fully to closing position. The lock is secured.

Check if the lock and the door are closed.

6 CHANGING CODE (WITH THE DOOR OPEN!)



Press and hold '0' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter the old code 🎵

For example!



- Select your new personal code. Enter the new code 🎵



- Enter the new code again 🎵

If an incorrect code is entered on the second occasion, you will hear a long tone and the old code remains valid.

MANAGER INSTRUCTIONS

7 ADDING CODES / USERS

With the manager code, up to nine additional opening codes can be added or deleted.



Press and hold '1' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter your personal Manager Code 🎵🎵

For example!



- Enter the new User Code 🎵🎵



- Enter the new User Code again 🎵🎵

If an incorrect code is entered on the second occasion, you will hear a long tone and the old code remains valid.

Caution! Only use 6-digits codes.

8 DELETE CODE / USER



Press and hold '3' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter your personal Manager Code 🎵🎵

The user has been deleted.

9 SETTING THE TIME DELAY AND OPENING WINDOW TIME

Time delay: The time between the first and second code entry in minutes.

Opening window time: The period of time in minutes during which the code can be entered a second time and the lock can be opened.



Press and hold '9' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter the Manager Code 🎵🎵



- Enter the delay setting and opening window time.
In this example: 2602 for **a delay of 26 minutes** and **an opening window time of 2 minutes** 🎵🎵.



- Enter the delay setting and opening window time again 🎵🎵.

10 CHANGING THE DELAY SETTING

The delay setting can be changed or deleted during the opening window time.



Enter a valid code. After the delay period the opening window time starts. The LED flashes 1x a second and beeps.



Press and hold '9' until you hear a double tone. The LED will illuminate when performing the following actions:



- Enter the Manager Code 🎵🎵



- Delete the delay and opening window time by entering **00 for the delay setting** and **01 for the opening window time**.



- Enter the delay setting and opening window time again 🎵🎵.

11 USER AUDIT



Press and hold '7' until you hear a double tone. The LED will illuminate when performing the following actions. **Listen to tone signals!**

For example!



- Enter the Manager Code 🎵🎵



- Enter 1, 2, 3, 4, 5, 6, 7, 8, 9, 0 to stop

Double signal 🎵🎵 = User active
 Long signal 🎵 = User not active

12 REPLACING THE BATTERY



If the lock emits a series of audible tones when opened, the battery is almost exhausted and must be replaced immediately.

You may **only use 9V ALKALINE Duracell, Duracell Industrial- or Energizer batteries.**

To insert a battery, loosen the screw (if present) and slide the cap off the unit as shown. Remove the used battery and connect one (1) fresh battery to the battery clip. Align cap in the little track of the housing and slide back on. Be careful not to pinch the battery cable.

13 TROUBLESHOOTING

The lock does not react.

a. Replace the battery

Always first replace the battery for a new 9V ALKALINE Duracell, Duracell Industrial- or Energizer battery.

b. Check the keypad


If the lock does not react, follow the procedure below to check that your keypad is working.


Press and hold key '5' until you hear a double tone. The LED will illuminate when performing the following actions:



Next, press all of the keys in one by one and one after the other



If the key = OK 

If the key = not OK , the test will be aborted.


If one or more keys do not operate properly, please contact your supplier.

c. I have forgotten my code

For security reasons, M-LOCKS does not provide a code that you can use to open your lock.

Please contact your supplier.

M•LOCKS

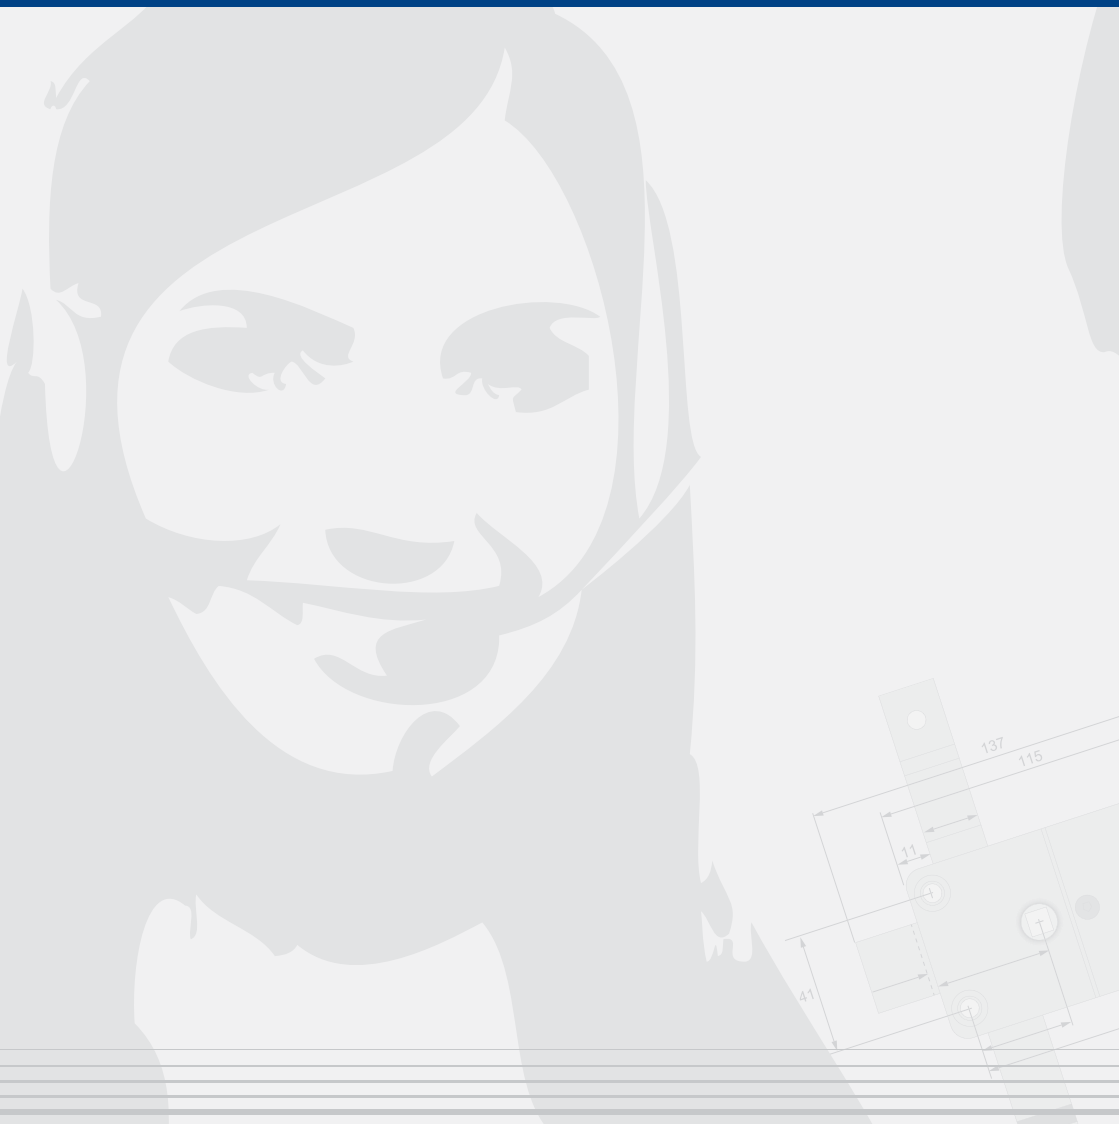

M•LOCKS BV

Vlijtstraat 40 • 7005 BN Doetinchem • The Netherlands • www.m-locks.com